


# AT-6107SP

SPORT MUFFLER - SLIP-ON SYSTEM,  
2000-2006 HONDA  
TRX 350 FM/FE/TM/TE, RANCHER

# MBRP®

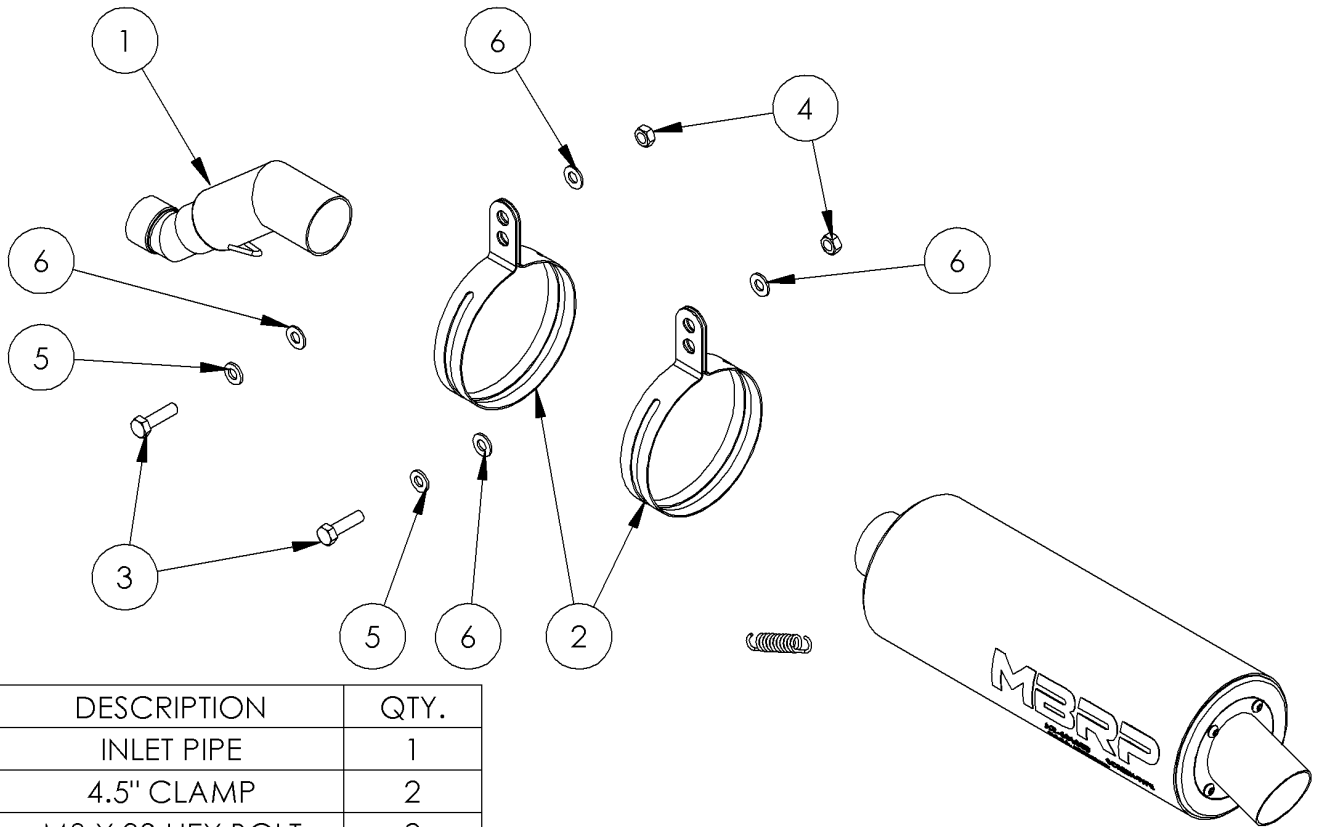

ITEM	DESCRIPTION	QTY.
1	INLET PIPE	1
2	4.5" CLAMP	2
3	M8 X 30 HEX BOLT	2
4	M8 HEX NUT	2
5	LOCK WASHER	2
6	M8 WASHER	4
7	MUFFLER	1
8	EXTENSION SPRING	1

Refer to this LOT NUMBER when contacting customer service: \_\_\_\_\_

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.



### **Removal of Stock Exhaust**

1. Loosen the flange bolt securing the clamp on the stock exhaust. Set aside the clamp for installation.
2. Remove the flange nuts that are securing the stock muffler in place then remove the muffler.

### **Installation of MBRP Exhaust**

1. Assemble the **Inlet Pipe** into the **Muffler** with the spring tabs lined up on both.
2. Install the supplied **Extension Spring** between the **Muffler** and the **Inlet Pipe**.
3. Slide both of the **4.5" Clamps** over the **Muffler**. Then slide the original clamp from the stock system over the **Inlet Pipe**.
4. Slide the new system in from the rear of the bike until the **Inlet Pipe** fits over the original head pipe. If required for proper fitment, ensure that the stock muffler gasket is still in place on the original head pipe.
5. Install the **Muffler** with both **4.5" Clamps** using the **M8X30 Hex Bolts, M8 Washers, Lock Washers** and **Hex Nuts**. Leave the bolts loose for now.
6. Starting at the front and working rearward, tighten all hardware and clamps while ensuring adequate vehicle clearance is maintained. Adjustment of the **Inlet Pipe** may be required to obtain optimal clearance.

**Congratulations!** You are ready to begin experiencing the improved performance and driving excitement of your **MBRP** Ltd. ATV Exhaust upgrade. We know you will enjoy your purchase.

# MBRP®

## Spark Arrestor Maintenance

In order to maintain optimal performance, the spark arrestor screen should be cleaned after every 30-35 hours of use.



**Figure 1**



**Figure 2**



**Figure 3**



**Figure 4**

### Clean-out Instructions:

Make sure the vehicle is cool before completing the clean-out procedure.

1. Using a 1/8" hex key, remove the 4 screws securing the outlet cap. (Figure 1).
2. Remove the outlet cap to expose the spark arrestor screen insert. (Figure 2)
3. Remove the screen insert. (Figure 3)
4. Using a wire brush, thoroughly brush the screen to remove residue. (Figure 4)
5. Replace the screen and cap.
6. Tighten the screws to 23 in-lbs (2.6 Nm).