



STOP READ THIS WARNING!

Make sure you test fit these exhaust components BEFORE any cutting, welding or unnecessary bending is done. Once modified, the components of the system are NOT RETURNABLE.

If you are unsure of the proper installation procedures or fitment, please contact a qualified exhaust shop or call our tech lines toll free at 800-421-3890 or visit our installation gallery at: www.pypesexhaust.com/install

One of our experienced exhaust techs will be glad to assist you in any way. Thanks and enjoy you new...

Pypes Performance Exhaust!

SCROLL DOWN FOR INSTRUCTIONS




XFM26E

2005-10 Ford Mustang GT 409 Stainless Steel Catted X-Pipe

Thanks again for purchasing your new stainless steel Pypes Performance Exhaust. Please take the time now to review these installation instructions and confirm that all the components in the kit were received in your shipment before you begin disassembly. If you find a component missing or have questions about the installation please contact our technical department at tech@pypesexhaust.com or through our live chat room found on the home page of the Pypes website at www.pypesexhaust.com.



Pypes Performance Exhaust
2705 Clemens Rd B103 Hatfield, PA 19440
www.pypesexhaust.com 800-421-3890

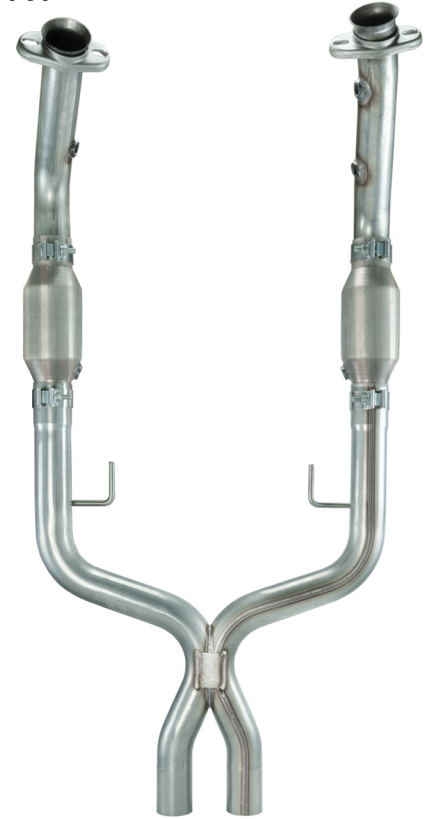

1. Begin by disconnecting your negative cable from your battery, unplug and remove your O2 sensor harnesses. Place the vehicle on a lift or four jack stands at maximum height. This will aid in an easier installation. Note: Make sure to support your mid-pipes just past the connection point between the factory h-pipe.
2. Unbolt the factory band clamps connecting your h-pipe to your mid-pipes. Soaking your factory mounting points with penetrating oil will make removal easier. Next, disconnect your three O2 sensors from the factory wiring harness and remove them from the h-pipe using a 22mm wrench. Remove the four bolts at the manifold/header end. Slide the h-pipe out of the factory hangers and remove.
3. Now it's time to install your new x-pipe. Begin by installing the driver and passenger legs of the x-pipe first. The leg with the two O2 sensor holes is the passenger side. Make sure the O2 bung on the drivers leg and the rear bung on the passenger leg are plugged and tight as the new cats will accept the O2 sensors.
4. Now it's time to install your new x-pipe. Begin by installing the driver and passenger front legs of the x-pipe first. The leg with the two O2 sensor holes is the passenger side. Slide the 1" wide band clamps on the slotted portion of the catalytic converters. Slide converters over the down-pipes. Next slide the last two 1" wide band clamps on to the expanded front portion of the x-pipe. Now install the rear x-pipe into the factory hangers. The welded area of the wire forms should face the ground or be on the bottom.
5. Complete the install: Make all final adjustments to the x-pipe and tighten all the clamps. Don't forget to re-install the factory band clamps at the rear connection between the x-pipe and the mid-pipes.
6. Install your three O2 sensors and reconnect them to the factory harness. Your rear two O2 sensors will thread directly into the bungs in the rear of the catalytic converters. After all the connections are tight, start the engine. Check and listen for any leaks. Make sure to check your connections periodically as they may come loose.

ENJOY YOUR NEW PYPES PERFORMANCE EXHAUST!