



INSTALLATION INSTRUCTIONS

PART No.

FB21233

**Jeep® JT Gladiator
Bed Storage Rack**



REQUIRED TOOLS

Utility Knife/Scissors
Ratchet
19MM Socket
19MM Wrench
8MM Allen Wrench
Help of a Friend

Thread Locker

KIT CONTAINS

Side Plate (Left & Right)
Center Plate
Steel Clamp
M12 Washer
M12 Button Head Bolt
M12 Carriage Bolt
M12 Hex Bolt
Foam Pad (Long)
Foam Pad (Short)
M12 Lock Washer
M12 Hex Nut


QTY

1ea
1
2
16
6
4
4
2
2
14
10

2123300

1) PREPARE

Prior to assembly, apply the adhesive foam padding to each of the Side Plate brackets. Flip the plates over, exposing the brackets as shown, and apply one long and short foam strips to the long and short ends of the bracket.

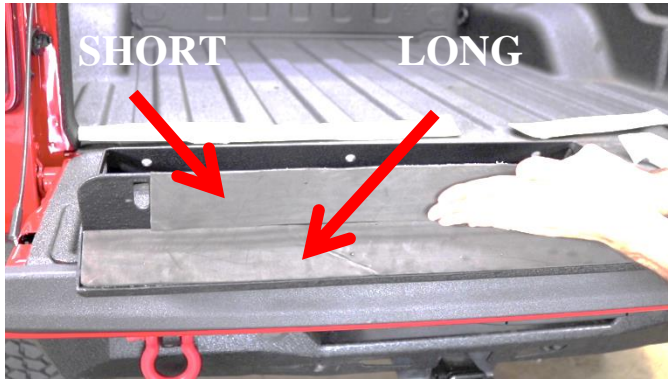

Trim away excess foam as needed.


2) ASSEMBLE THE RACK

The front of the rack is indicated by our signature plate on the Center Rack, and the orientation of the side plates is indicated by the piranha logo resting closest to the vehicle's cab. [See Below].



Using 6 of the included button head bolts, washers, lock washers, and hex nuts, loosely assemble the Side Plates to the Center Plate. They will be tightened in the last step.



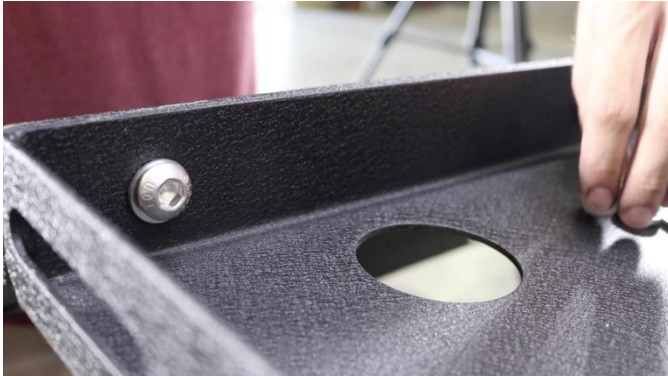

3) INSTALL THE RACK

With the help of a friend, lift the Rack onto the bed as desired.



Push the Clamp high into the vehicle's rail, so that it grips the plastic, and tighten down the bolts with a 19mm socket.



With a Steel Clamp, 2 carriage bolts, washers, lock washers, and hex nuts, insert the bolts into the Clamp as shown, and rotate it behind the Rack bracket and into place.



If your vehicle has a Trail Rail, however, you will instead insert the included 4 T-Nuts, two into each Rail, and with the included 4 hex bolts, washers, and lock washers, secure the Rack's brackets into the Rail.

4) TIGHTEN DOWN

With the brackets secured and aligned, secure the Center and Side Plates together with an 8mm Allen and a 19mm wrench.



ENJOY YOUR NEW FISHBONE OFFROAD JT BED STORAGE RACK!

