

FISHBONE
OFFROAD



INSTALLATION INSTRUCTIONS

PART No.

FB21313

Jeep® 97-06 TJ Wrangler

Hood Mounted Hi-Lift Jack Mount



VIDEO AVAILABLE



REQUIRED TOOLS

T40 Torx Bit
5mm Allen Key
Help of a Friend

KIT CONTAINS

Mounting Bracket (Driver/Passenger)
Rear Entry Guard (Driver/Passenger)
.5" Hex Bolt
M8 Black Flat Washer
M8 Black Button Head Bolt
.5" Flat washer
.5" Flat Washer
Foam

QTY

1ea
1ea
2
6
6
2
2
2

INSTALLATION INSTRUCTIONS

PART No.

FB21313

Jeep® 97-06 TJ Wrangler

Hood Mounted Hi-Lift Jack Mount

1) PREPARE YOUR VEHICLE

Remove any aftermarket accessories in the way of your hood hinges.

With a T40 Torx bit, remove the 3 bolts from your factory hinge, one hood hinge at a time. This will help retain the hood-body alignment.




2) INSTALL BRACKETS

The brackets are driver and passenger side specific, and can be identified by our Piranha logo facing outboard.



Remove the adhesive backing of one of the foam protectors and apply it to the bottom of the respective bracket. Place the bracket onto the hinge and secure using 3 of the included bolts and washer with a 5mm Allen key.

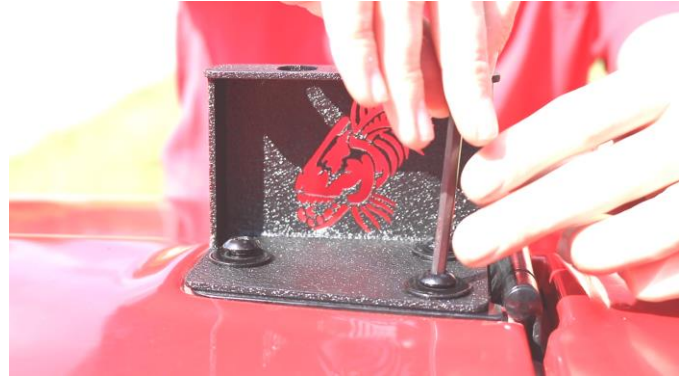

Repeat on the opposite side.

3) INSTALL HI-LIFT JACK

With the help of a friend, lift your jack onto the brackets and determine which rail holes you would like to use for the installation.



With the included bolts, washers, and wing nuts, secure the jack to the mounts through the rail.



4) ENJOY YOUR NEW FISHBONE HI-LIFT JACK MOUNT!!