




# INSTALLATION INSTRUCTIONS

**PART No.**

**FB25312**

**2016+/3<sup>rd</sup> Gen Toyota Tacoma  
Center Console MOLLE Panels**

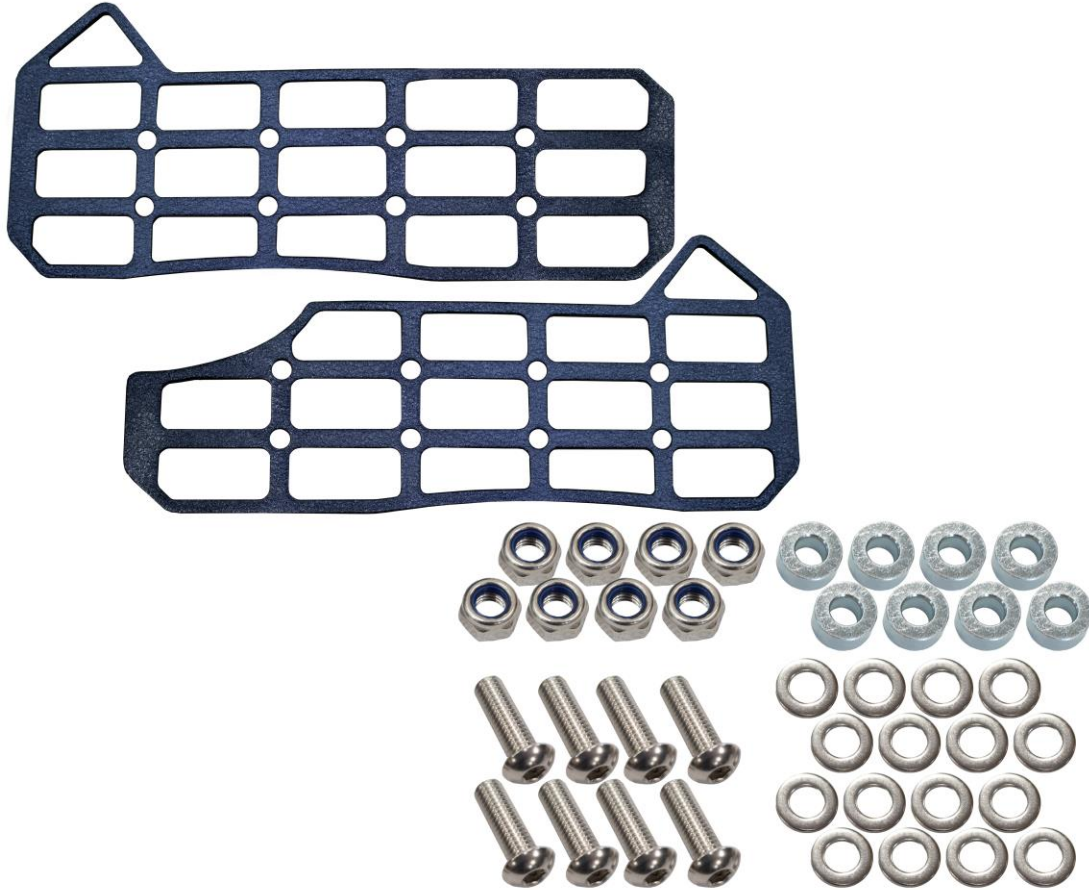

**Drilling is required**

**REQUIRED TOOLS**

- 5mm Hex Wrench
- Marker
- Drill
- 5/16" Drill Bit
- 13mm Wrench

**KIT CONTAINS**

- MOLLE Panels (Driver/Passenger)
- M8 Button Head Bolt
- M8 Flat Washer
- M8 Nyloc Nut
- Spacers

**QTY**

- 1ea
- 8
- 16
- 8
- 8

2531200

## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25312**

**2016+/3<sup>rd</sup> Gen Toyota Tacoma  
Center Console MOLLE Panels**


### 1) REMOVE YOUR CONSOLE

Begin by removing your center console by unscrewing the stick knob and pulling the plastic section up and away from its base, while disconnecting its power.




### 2) MARK AND DRILL

The panels have driver and passenger side specific shapes, but the installation is the same for both.

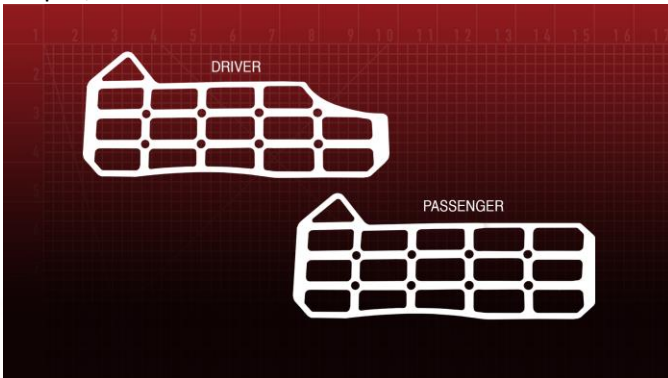


Hold the panel up to the base and align the edges of the two. With a marker, evenly mark 4 out of the 8 holes that are to be drilled.

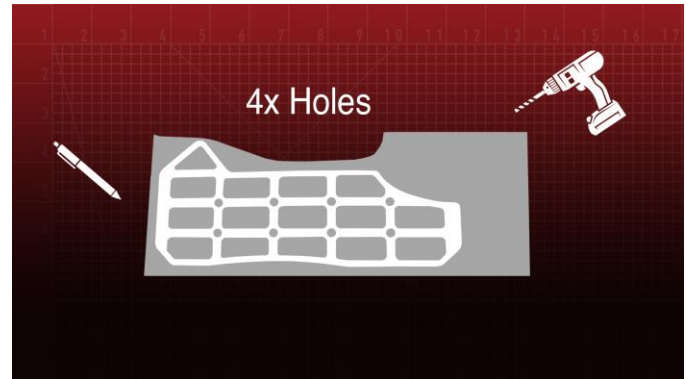

With a 5/16" drill bit, drill out the holes while being careful not to damage the inner lining.

### 3) INSTALL THE PANEL

With the included hardware, secure the panel to the base. The 4 bolts will pass through washers, the panel, and spacers on the outside, while secured with washers and nuts on the inside of the base, with a 5mm Hex Wrench and 13mm Wrench.

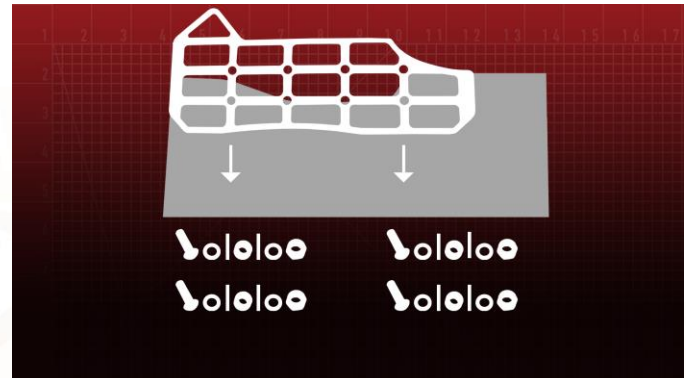

Repeat on the opposite side, and reinstall the console.

