

## INSTALLATION INSTRUCTIONS


**PART No.**

FB27369, FB27370, FB27371, & FB27372

Universal to Any 2.5" Spring Shim Set



VIDEO AVAILABLE

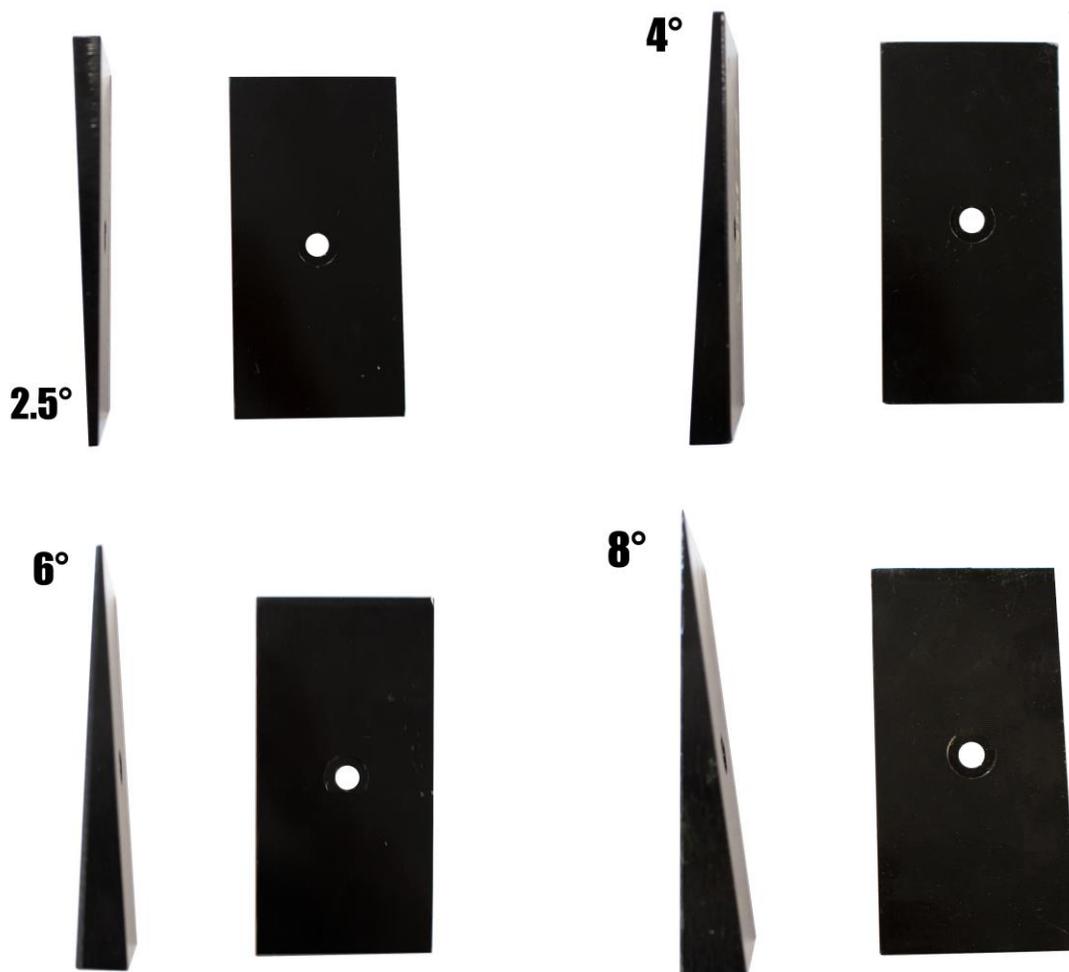

### REQUIRED TOOLS

Socket Set  
Jack Stands

### KIT CONTAINS

Shim

### QTY

2

27369, FB27370, FB27371, FB2737200

### Universal to Any 2.5" Spring Shim Set

**1) LIFT & SUPPORT**

Jack your vehicle so that your suspension has the ability to droop. Support it with jack stands.



**2) UNINSTALL**

Remove the vehicle's lower spring plate.



Remove the factory shim.

**3) INSTALL**

Install your new set of shims. For springs over axles, the larger side will face the front of the vehicle. For springs under axles, the larger face will point towards the rear of the vehicle.