

FISHBONE
OFFROAD



INSTALLATION INSTRUCTIONS

PART No.

FB55285 & FB55286
97-06 TJ Wrangler
ParaCord Door Handles



REQUIRED TOOLS

T15 Torx Bit
Screwdriver OR
Body Clip Tool

KIT CONTAINS

ParaCord Door Handle

QTY

2

INSTALLATION INSTRUCTIONS

PART No. FB55285 & FB55286
97-06 TJ Wrangler
ParaCord Door Handles

1) REMOVE

Open your vehicle's door and locate the inner door handle retaining bolts.



With a T15 Torx bit, remove these two bolts and washers.




To remove the handle, simple pull it out and away.




2) INSTALL

The door handles are secured by nut clips on sheet metal. To install your new handles, you will need to


separate the plastic panel from the metal, while sliding the grommet in between the bolt hole and nut clip.

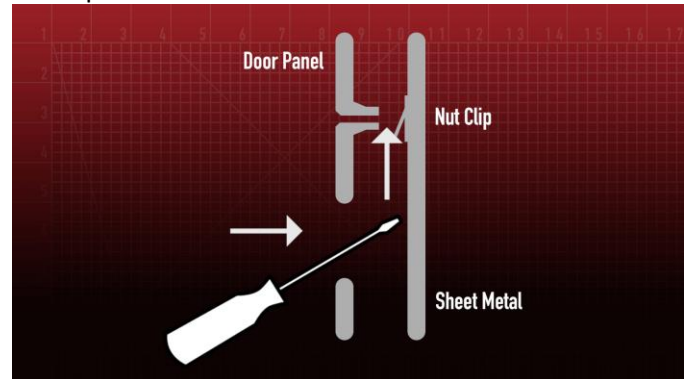

To do this, use a screwdriver or similar to wedge them apart, while avoiding knocking the nut clip off.

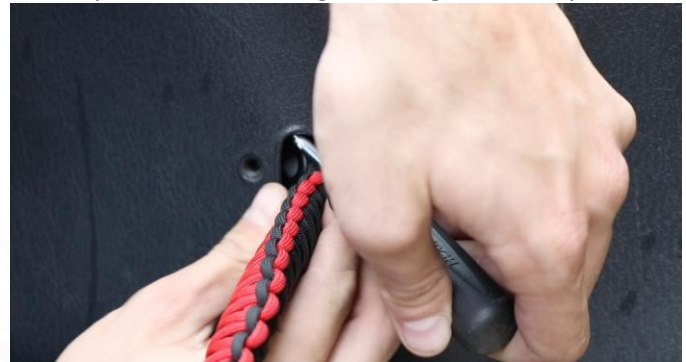

Once in place, reinstall the bolts and washers with a T15 Torx Bit.

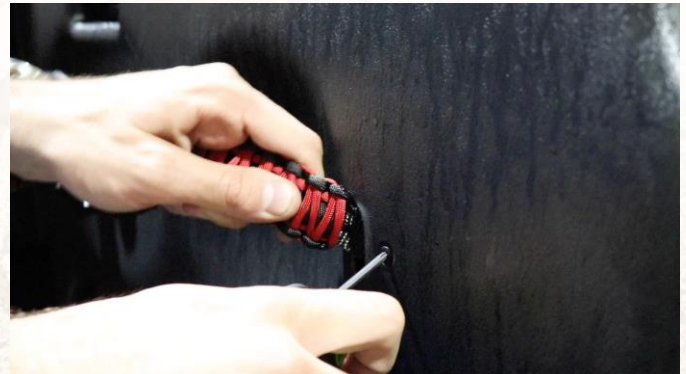

ENJOY YOUR FISHBONE OFFROAD PARACORD DOOR HANDLES!