



RUST BUSTER

RB9912 & RB9913 Bed Bolt Kit

1992-2008 Ford F-150

1999-2016 Ford F-250, F-350, F-450, & F-550



RB9912



RB9913

REQUIRED TOOLS

- Jack Stands or Lift
- 8mm Allen Key or Hex Bit
- Wrench
- Impact Gun or Ratchet
- Flashlight
- Anti-Seize
- Help of a Friend
- Fire Extinguisher

RB9912

- M14 Hex Bolts
- M14 Washers
- M14 Distorted Thread Nuts

QTY

- 8
- 8
- 8

RB9913

- M14 Hex Bolts
- M14 Washers
- M14 Distorted Thread Nuts

- 8
- 8
- 8



RUST BUSTER

RB9912 & RB9913 Bed Bolt Kit 1992-2008 Ford F-150

1999-2016 Ford F-250, F-350, F-450, & F-550



WARNING!


If you are unsure on how to perform the installation or how to operate any of the required tools listed on the front page, it is **HIGHLY** advised that you enlist the work of a certified installer.

Failure to follow proper safety precautions and instructions may result in serious injury. **The user assumes all liability when installing the product.**

1) PREPARING FOR YOUR INSTALL

Remove the 8 bolts on the bed of your vehicle.

NOTE: If your vehicle is a short bed, you will only need to remove 6 bolts.

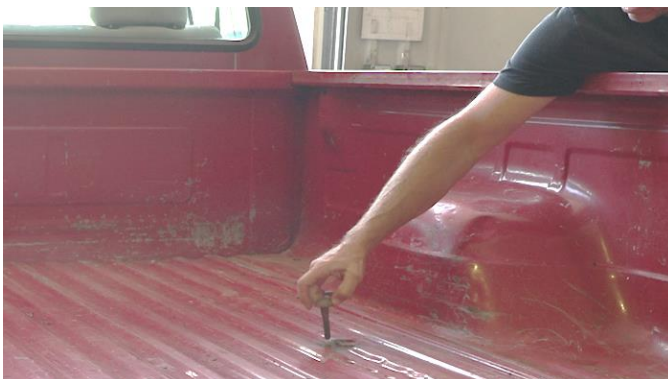


2) INSTALL YOUR BED BOLTS

Glance underneath your bed and make sure the bolt holes are aligned.

Once aligned, lift up your bed and slide the distorted thread nut onto the frame rail making sure to align it with the bed bolt holes on your bed. Lower your bed onto the thread nut.



Once you have all the distorted thread nuts aligned, coat your bolts with anti-seize. This will help seal and protect your bed bolts from seizing, corrosion, and galling.

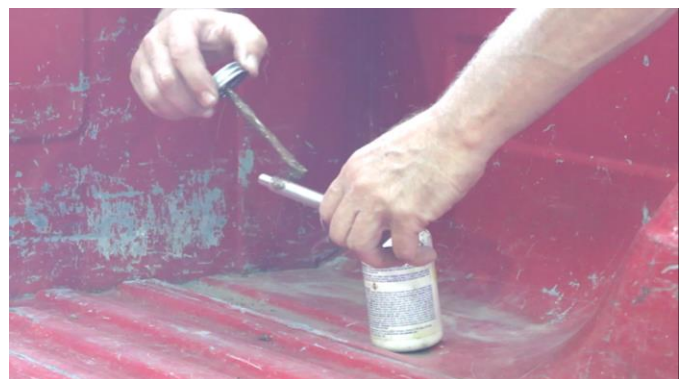



RUST BUSTER

**RB9912 & RB9913
Bed Bolt Kit**

1992-2008 Ford F-150

1999-2016 Ford F-250, F-350, F-450, & F-550

Insert the included bolts and washers inside your bed.



Screw them into place using a 8mm allen key or hex bit with a impact gun or ratchet.

